

SPECTROGON

Optical filters • Coatings • Gratings

Date: 2018-03-27

Operator:

Article:

Art no: 713M

BBP-8925-9275 nm Ø25.4x1.0 mm

Specifications:

HP1: 8925 ±150 nm

HP2: 9275 ±150 nm


Tavg: > 70 %

Blocking: 200 - 12000 nm (OD 3)

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

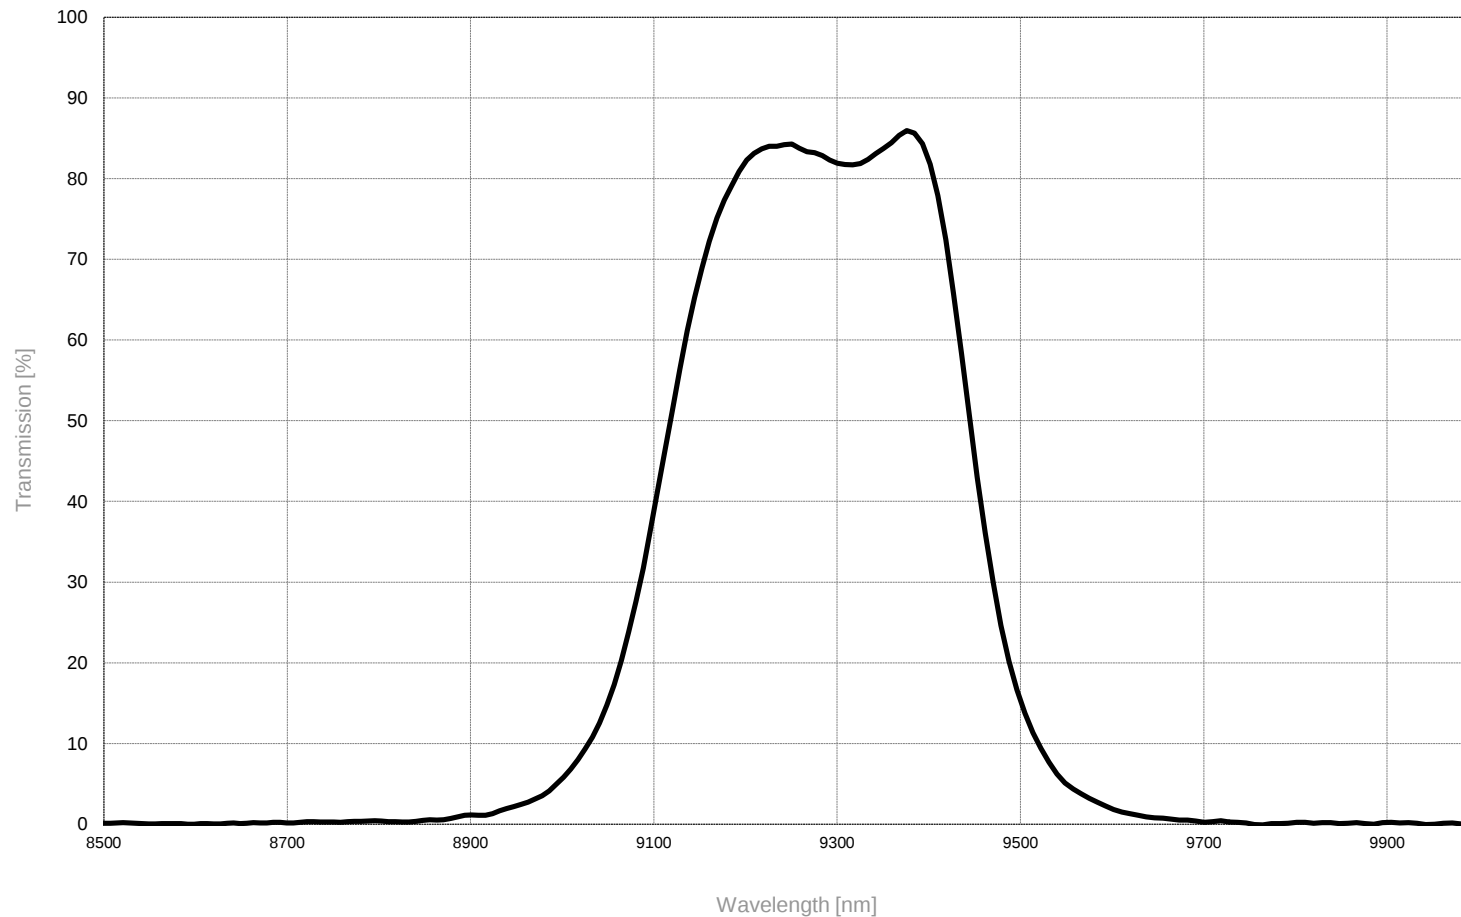

Measured values:

Cuton 5 % = 8993,84 nm

Cutoff 5 % = 9550,01 nm

HP1 = 9104,37 nm

HP2 = 9454,71 nm

Tavg = 82,99 %

Slope 1 = 1,73 %

Slope 2 = 1,35 %

Spectrogon:

T:13553

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.