


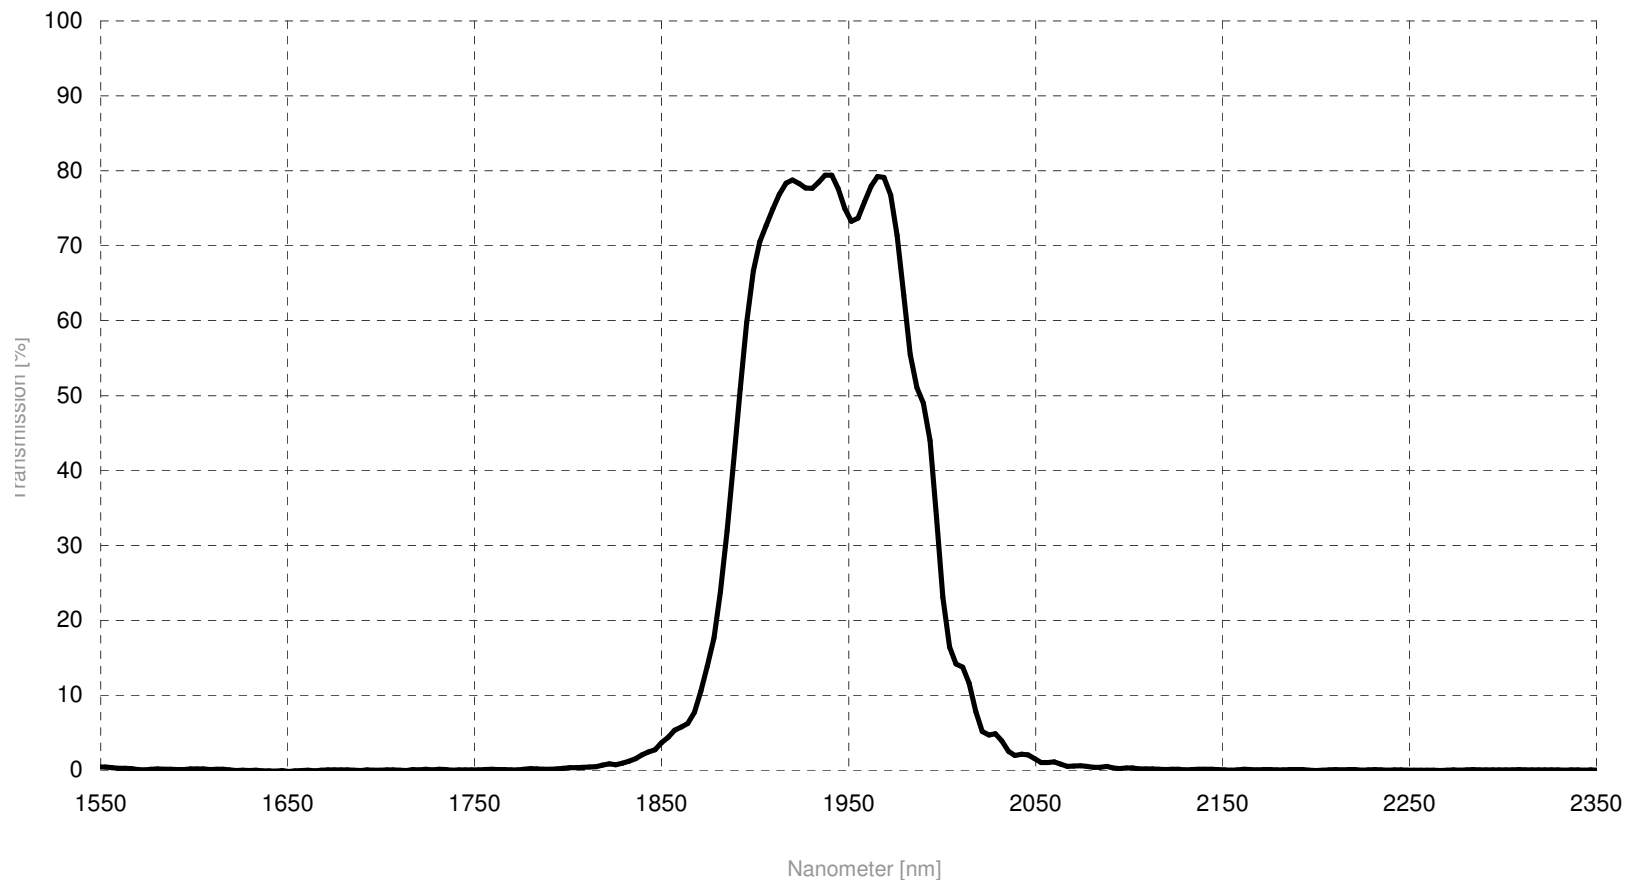

# SPECTROGON

Optical filters • Coatings • Gratings

## Article:

BP-1939-107 nm

## Specifications:

CWL: +20/-20 nm

HW: +20/-20 nm

Tmin: 70 %

Blocking: 3500 nm

## Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

## Actual values:

CWL = 1941,5 nm

HW = 107 nm

Cuton 5% = 1855,8 nm

Cutoff 5% = 2022,7 nm

HP1 = 1888 nm

HP2 = 1995 nm

Tpeak = 79,43 %

Tavg = 76,74 %

Slope 1 = 2,2 %

Slope 2 = 2,2 %

Data collection range: 1399 - 2900 nm

Diagram range: 1550 - 2350 nm

Ref: 9-2274

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.