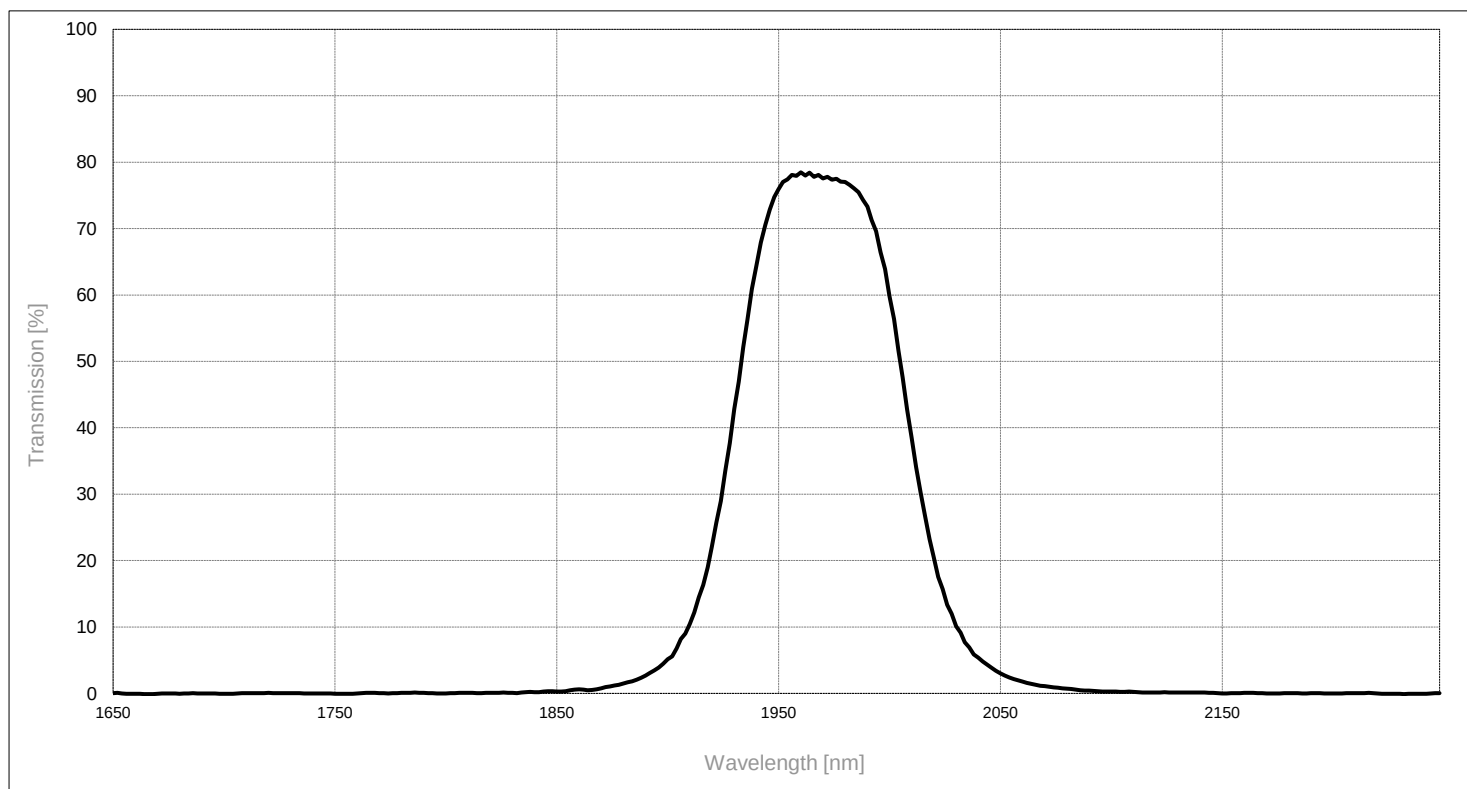


**Measured values:**

CWL = 1969,12 nm...OK
HW = 81,07 nm...OK
Cuton 5 % = 1899,57 nm
Cutoff 5 % = 2041,39 nm
HP1 = 1928,59 nm
HP2 = 2009,66 nm
Tpeak = 78,45 %
Tavg = 76,27 %
Slope 1 = 2,04 %
Slope 2 = 2,14 %

Transmittance:

T high min 1945 — 1993 nm = 78,45 %...OK

SPECTROGON

Optical filters • Coatings • Gratings

Date: 2023-10-20

Operator: DG

Article:

Art no: 713M

BP-1965-080 nm Ø25.4x1.0 mm

Specifications:

CWL: 1965 ±20 nm

HW: 80 ±20 nm

Blocking: 200 — 3500 nm (0,1 %)

T high min 70 %

Measurement conditions:

Temperature: 296 K AOI: 0 °

Spectrogon:

M nr: US100937-50

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.