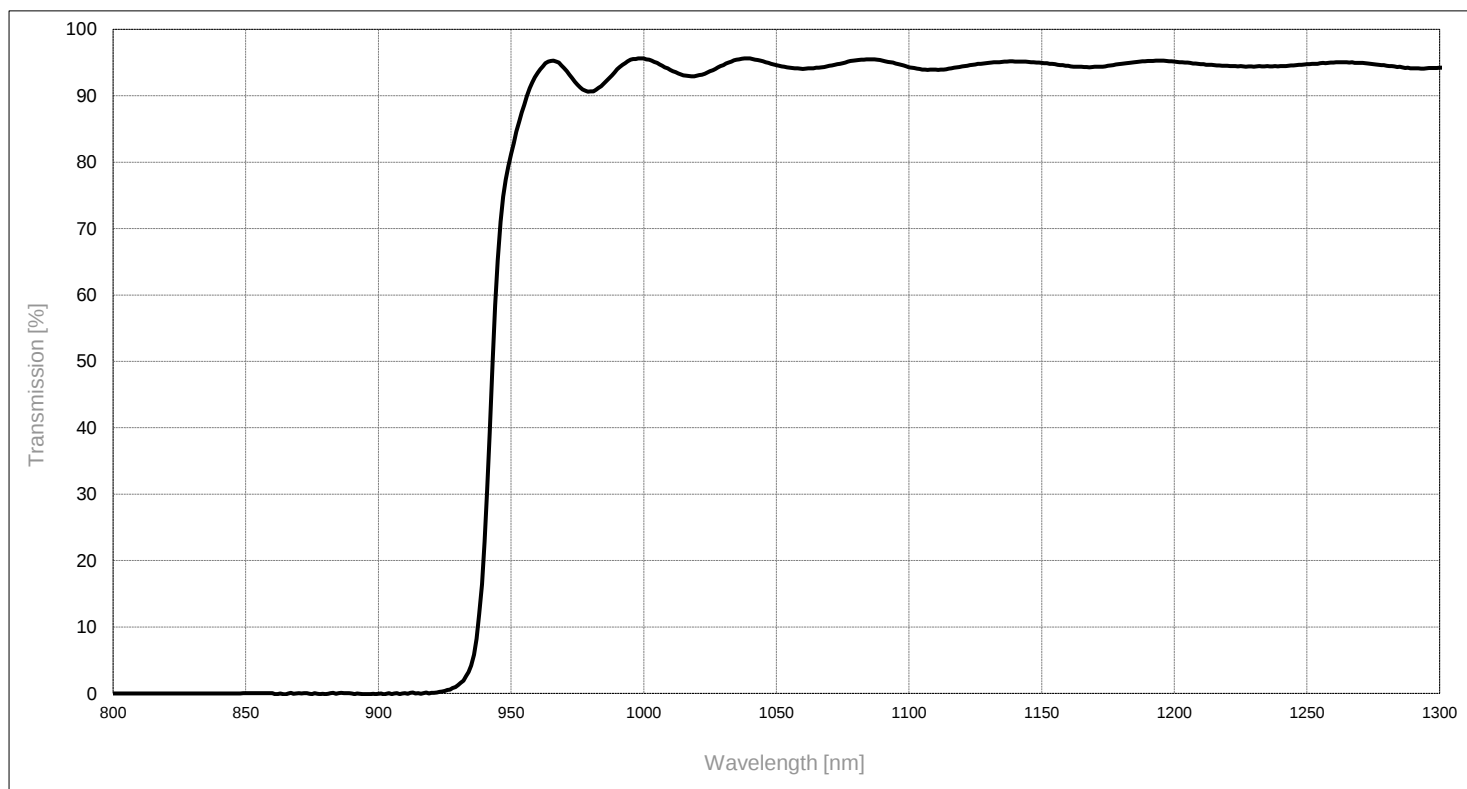


**Measured values:**

Cuton 5 % = 935,49 nm...OK

HP1 = 942,81 nm

Tavg = 94,51 %

Slope 1 = 1,28 %

Transmittance:

T high min 957 — 2500 nm = 95,62 %...OK

SPECTROGON

Optical filters • Coatings • Gratings

Date: 2024-02-13

Operator: SRO

Article:

Art no: 712.703.830

LP-0940 nm Ø25.4x1.0 mm

Specifications:

Cuton 5 %: 940 ±20 nm

Blocking: 200 — nm (0,1 %)

T high min 70 %

Measurement conditions:

Temperature: 296 K AOI: 0 °

Custom sizing:

Color marking:

Spectrogon:

Order no: 102843 T nr: 72567

Customer:

P O: 557237 179079

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.