


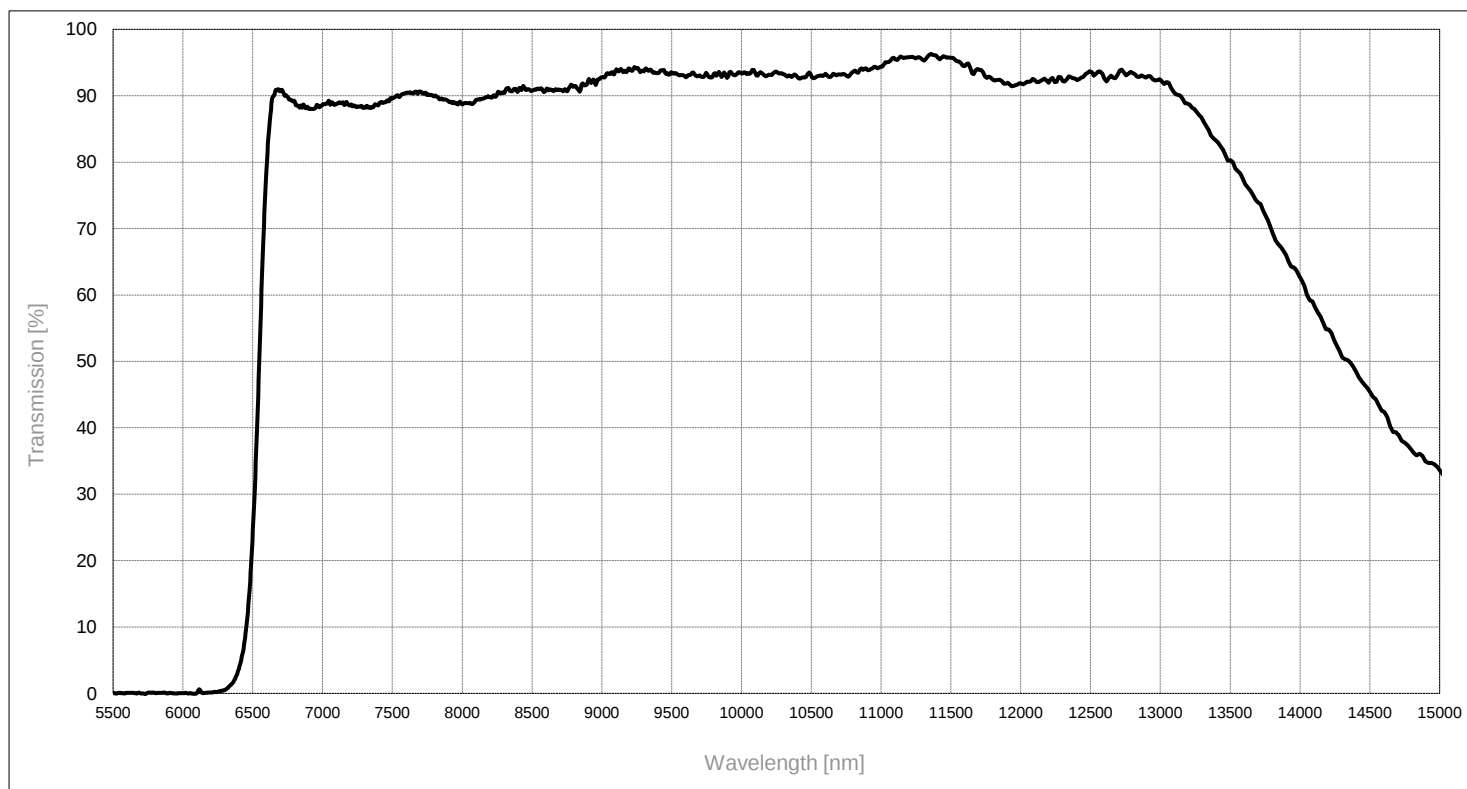

Measured values:

Cuton 5 % = 6416,48 nm
HP1 = 6543,86 nm...OK
HP2 = 14408,85 nm
Tavg = 91,98 %
Slope 1 = 2,69 %

Transmittance:

T low min 7294 — 12000 nm = 88,13 %...OK

SPECTROGON

Optical filters • Coatings • Gratings

Date: 11/15/2024

Operator:

Article:

Art no: 713M

LP-6600 nm Ø25.4x1.0 mm

Specifications:

Cuton 5%: 6600 ±200 nm

B: 200— nm avg 0,1%

T low min 70 %

Measurement conditions:

Temperature: 296 K AOI: 0 °

Spectrogon:

T nr: 74635

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.