


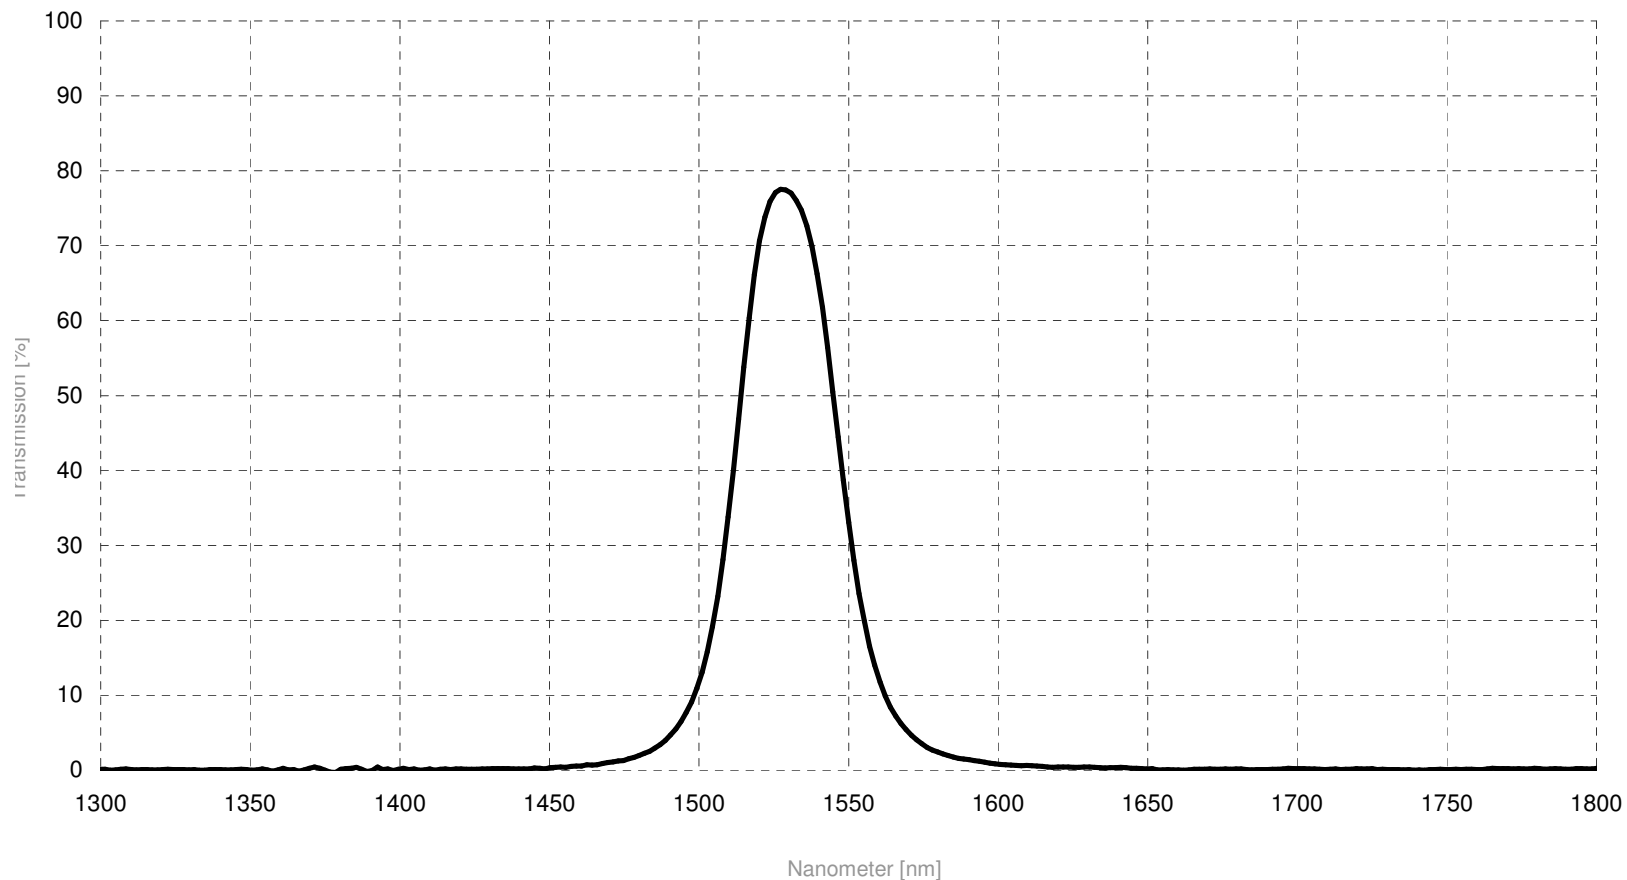

Actual values:

CWL = 1529,7 nm

HW = 37,1 nm

Cuton 5% = 1491,2 nm

Cutoff 5% = 1570,2 nm

HP1 = 1511,1 nm

HP2 = 1548,2 nm

Tpeak = 77,55 %

Tavg = 74,08 %

Slope 1 = 1,7 %

Slope 2 = 1,9 %

Data collection range: 1099 - 1900 nm

Diagram range: 1300 - 1800 nm

SPECTROGON

Optical filters • Coatings • Gratings

Article:

NB-1530-035 nm

Specifications:

CWL: +10/-10 nm

HW: +7/-7 nm

Tmin: 70 %

Blocking: 3500 nm

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

Ref: 4-5654

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.