


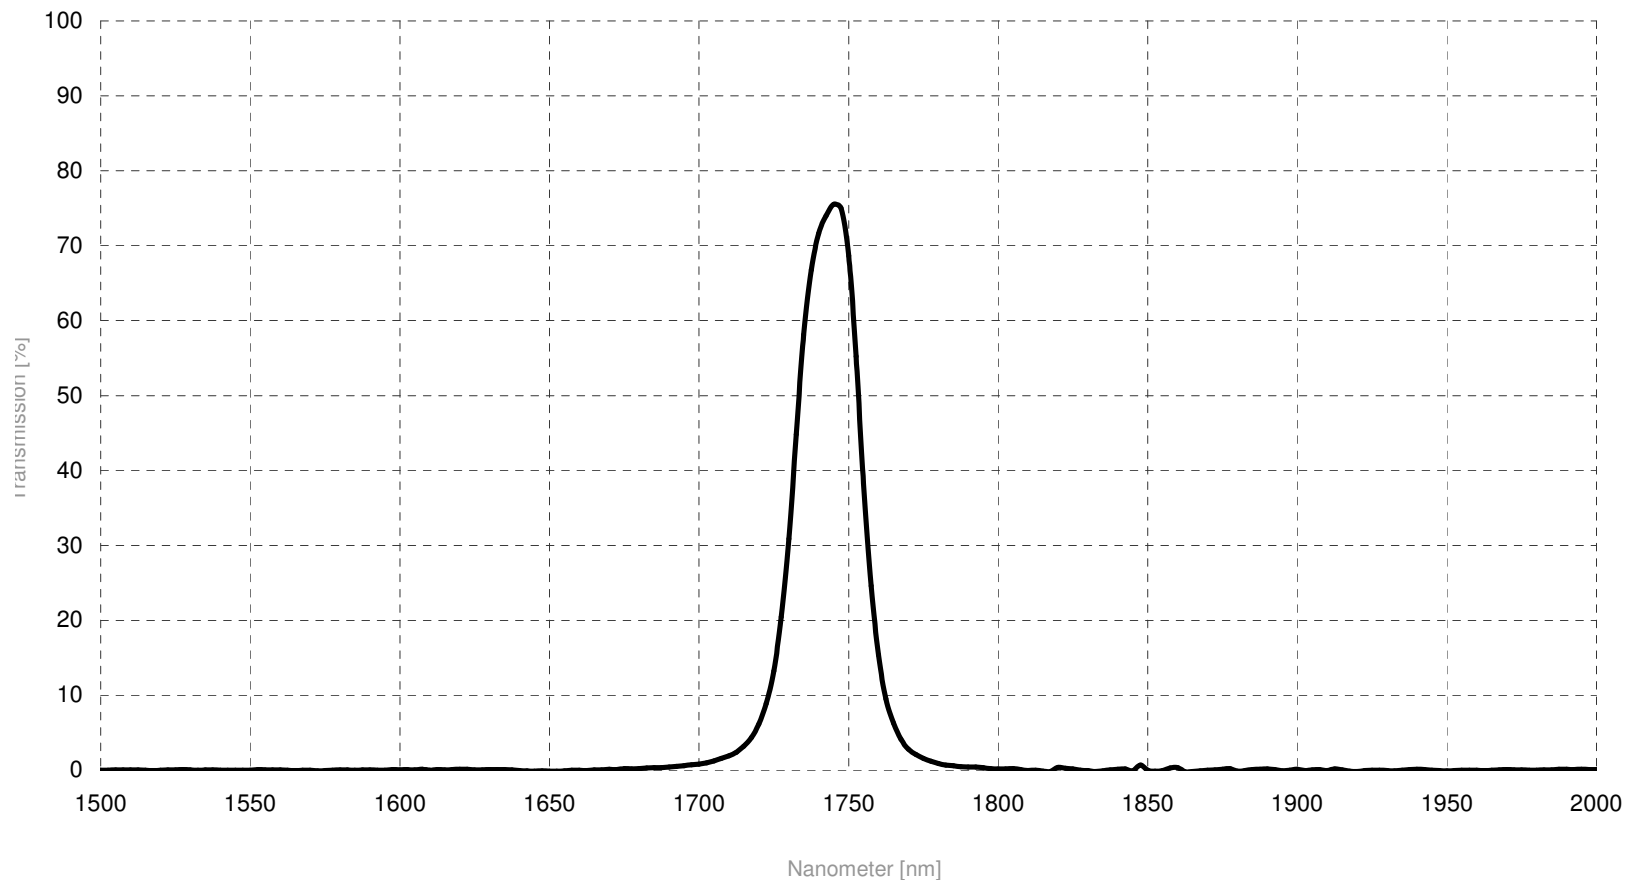

**Actual values:**

CWL = 1743,2 nm

HW = 23,9 nm

Cuton 5% = 1718,4 nm

Cutoff 5% = 1766,5 nm

HP1 = 1731,2 nm

HP2 = 1755,1 nm

Tpeak = 75,52 %

Tavg = 70,18 %

Slope 1 = 1 %

Slope 2 = 0,9 %

Data collection range: 1000 - 2050 nm

Diagram range: 1500 - 2000 nm

# SPECTROGON

Optical filters • Coatings • Gratings

**Article:**

NB-1740-025 nm

**Specifications:**

CWL: +10/-10 nm

HW: +5/-5 nm

Tmin: 70 %

Blocking: 3500 nm

**Measurement conditions:**

Temperature: 23 °C

AOI: 0 deg

Ref: 4-4355

*Calibration traceable to NIST.*

*Spectrogon products conform in all aspects with the RoHS Directive.*