

SPECTROGON

Optical filters • Coatings • Gratings

Date: 19-04-02

Operator:

Article:

Art no: 713M

NB-2092-010 nm Ø25.4x1.0 mm

Specifications:

CWL: 2092 ± 15 nm HW:

10 ± 5 nm

Tmin: 60 %

Block: 3500 nm (OD 3)

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

Custom sizing:

Color marking:

Quantity:

Spectrogon:


T nr:

Order no:

Customer:

P N:

P O:

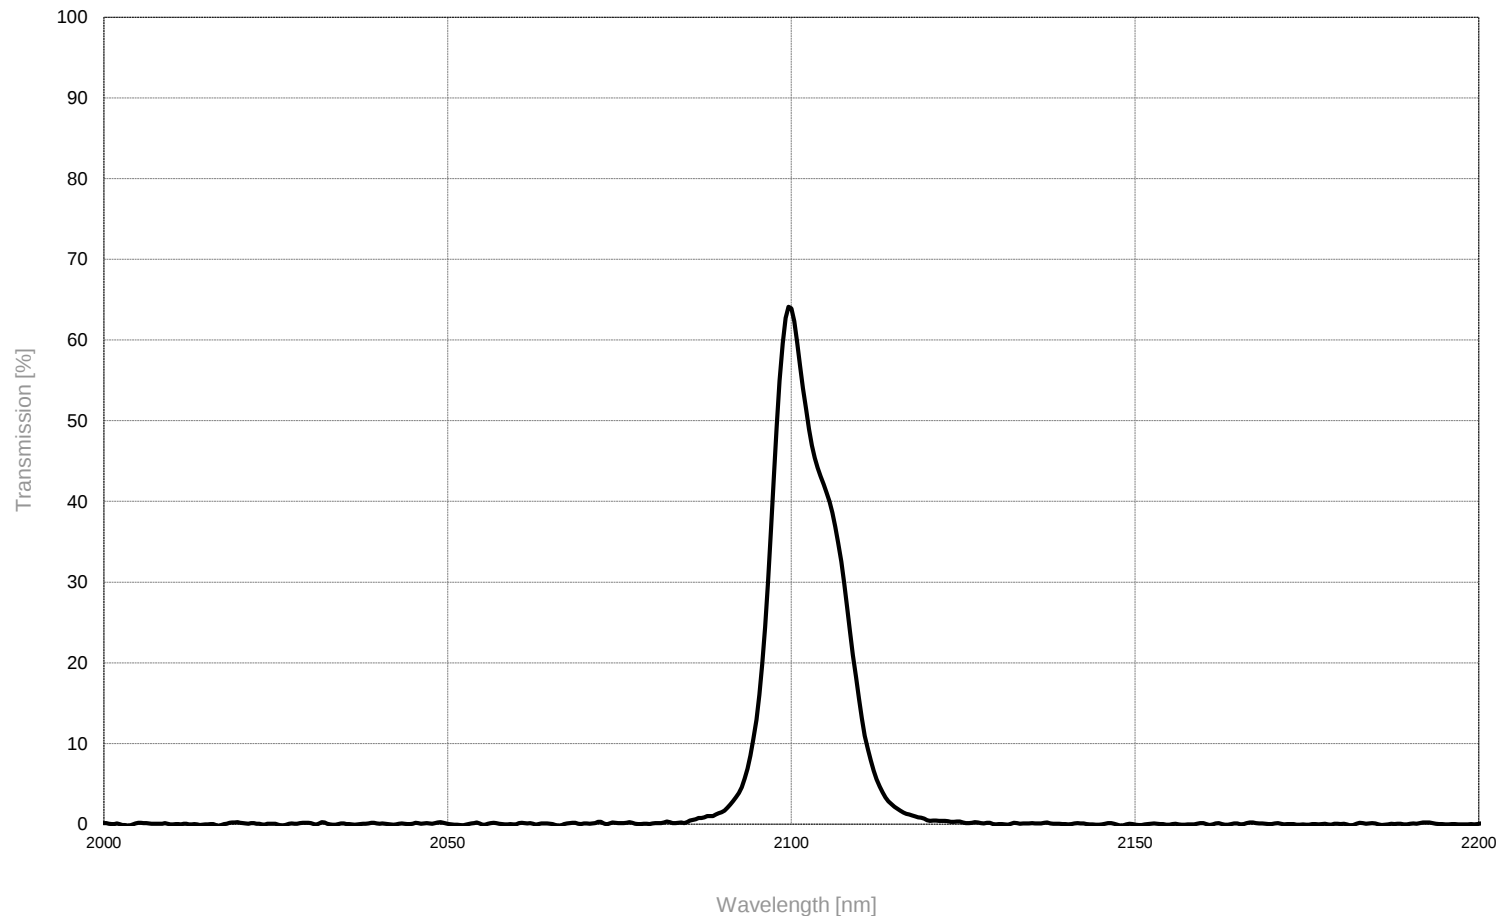

Measured values:

CWL = 2102,04 nm

HW = 10,59 nm

Cuton 5 % = 2092,97 nm

Cutoff 5 % = 2112,68 nm

HP1 = 2096,75 nm

HP2 = 2107,34 nm

Tpeak = 64,13 %

Tavg = 59,8 %

Slope 1 = 0,24 %

Slope 2 = 0,5 %

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.