

SPECTROGON

Optical filters • Coatings • Gratings

Date: 19-02-28

Operator: ZS

Article:

Art no: 713M

NB-2285-010 nm Ø25.4x0.5 mm

Specifications:

CWL: 2285 ±5 nm

HW: 10 ±3 nm


Tmin: 50%

Block: 200-3500 (OD 3)

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

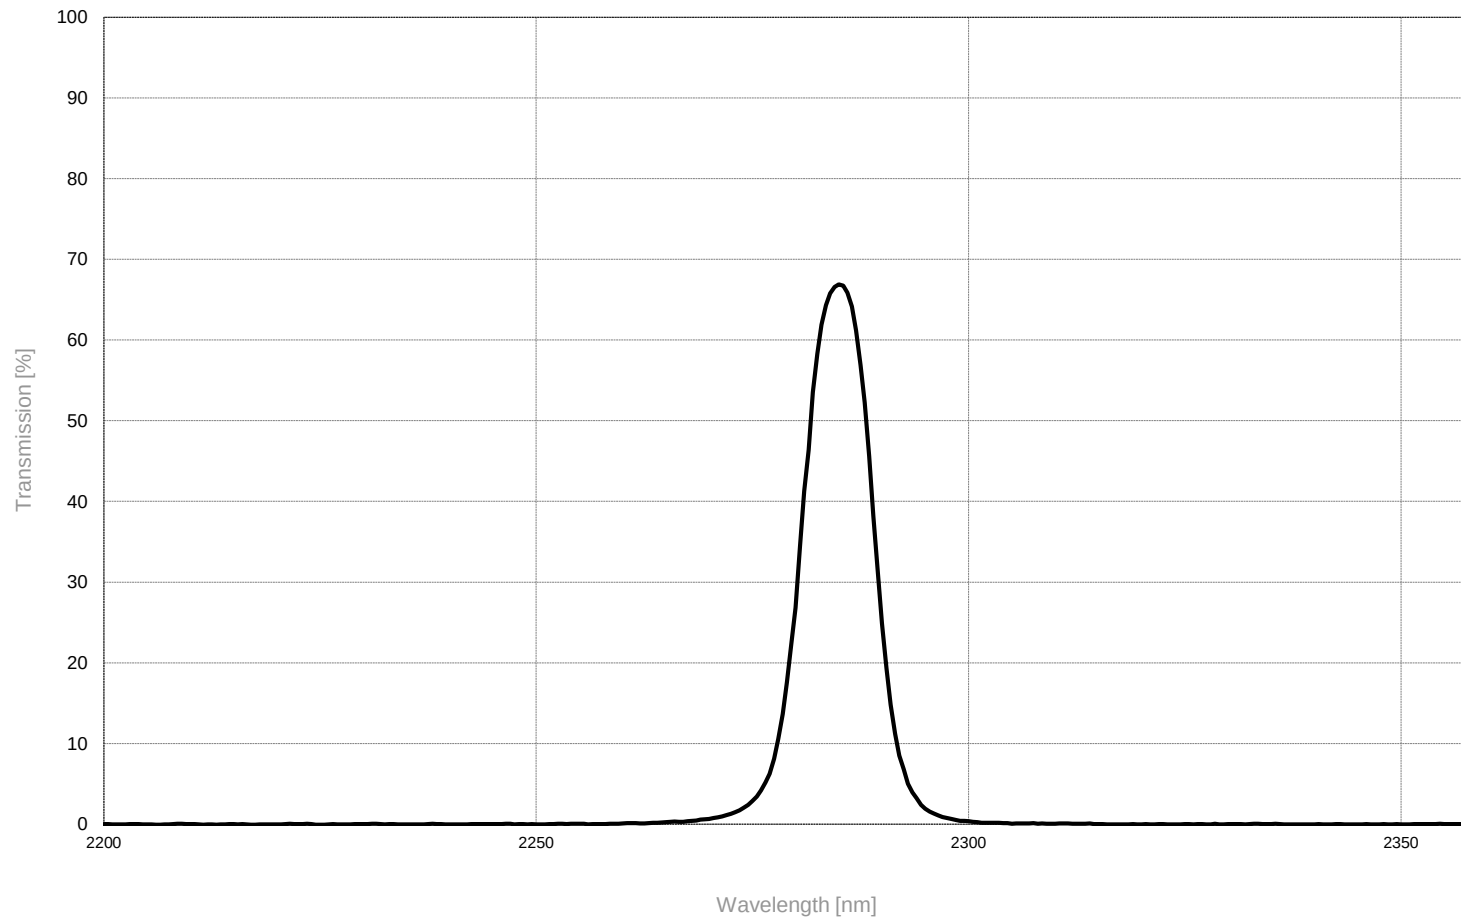

Measured values:

CWL = 2284,89 nm...OK

HW = 8,91 nm...OK

Cuton 5 % = 2276,42 nm

Cutoff 5 % = 2293 nm

HP1 = 2280,43 nm

HP2 = 2289,34 nm

Tpeak = 66,9 %

Tavg = 64,17 %

Slope 1 = 0,24 %

Slope 2 = 0,22 %

Spectrogon:

Ref: 713S02269

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.