

SPECTROGON

Optical filters • Coatings • Gratings

Date: 2018-06-26

Operator: SDZ

Article:

Art no: 713M10256

NB-2302-010 nm Ø25.4x1.0 mm

Specifications:

CWL: 2302 ±5 nm

HW: 10 ±3 nm


Tmin: 60 %

Blocking: 190 - 3500 nm (OD 3)

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

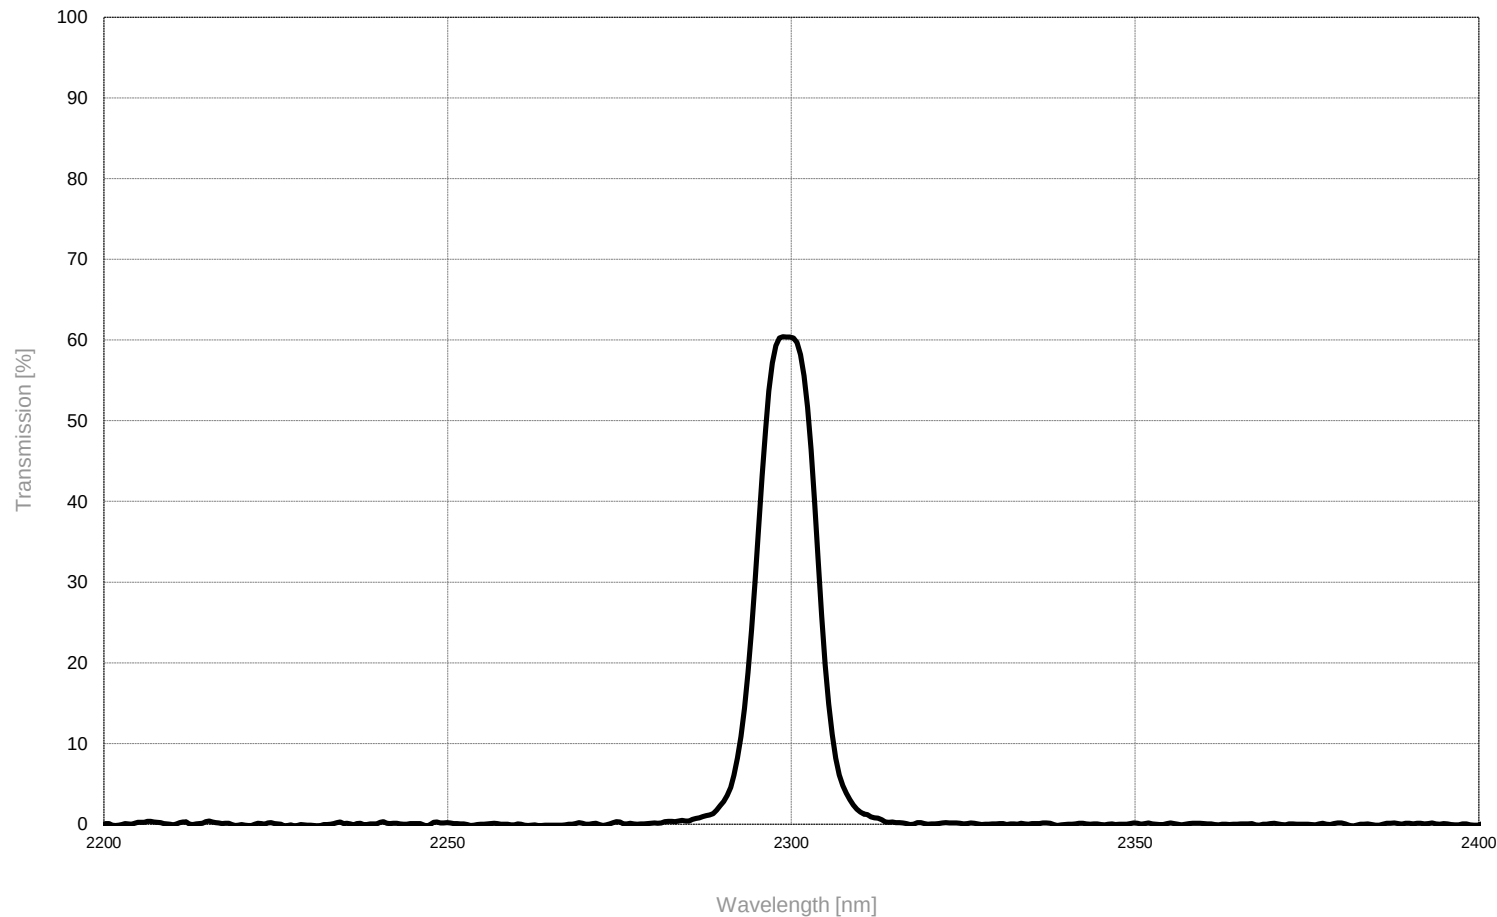

Measured values:

CWL = 2299,41 nm...OK

HW = 9,36 nm...OK

Cuton 5 % = 2291,31 nm

Cutoff 5 % = 2307,4 nm

HP1 = 2294,73 nm

HP2 = 2304,08 nm

Tpeak = 60,4 %...OK

Tavg = 58,66 %

Slope 1 = 0,21 %

Slope 2 = 0,2 %

Spectrogon:

M nr: 44844

Ref: T11597

713S02588

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.