


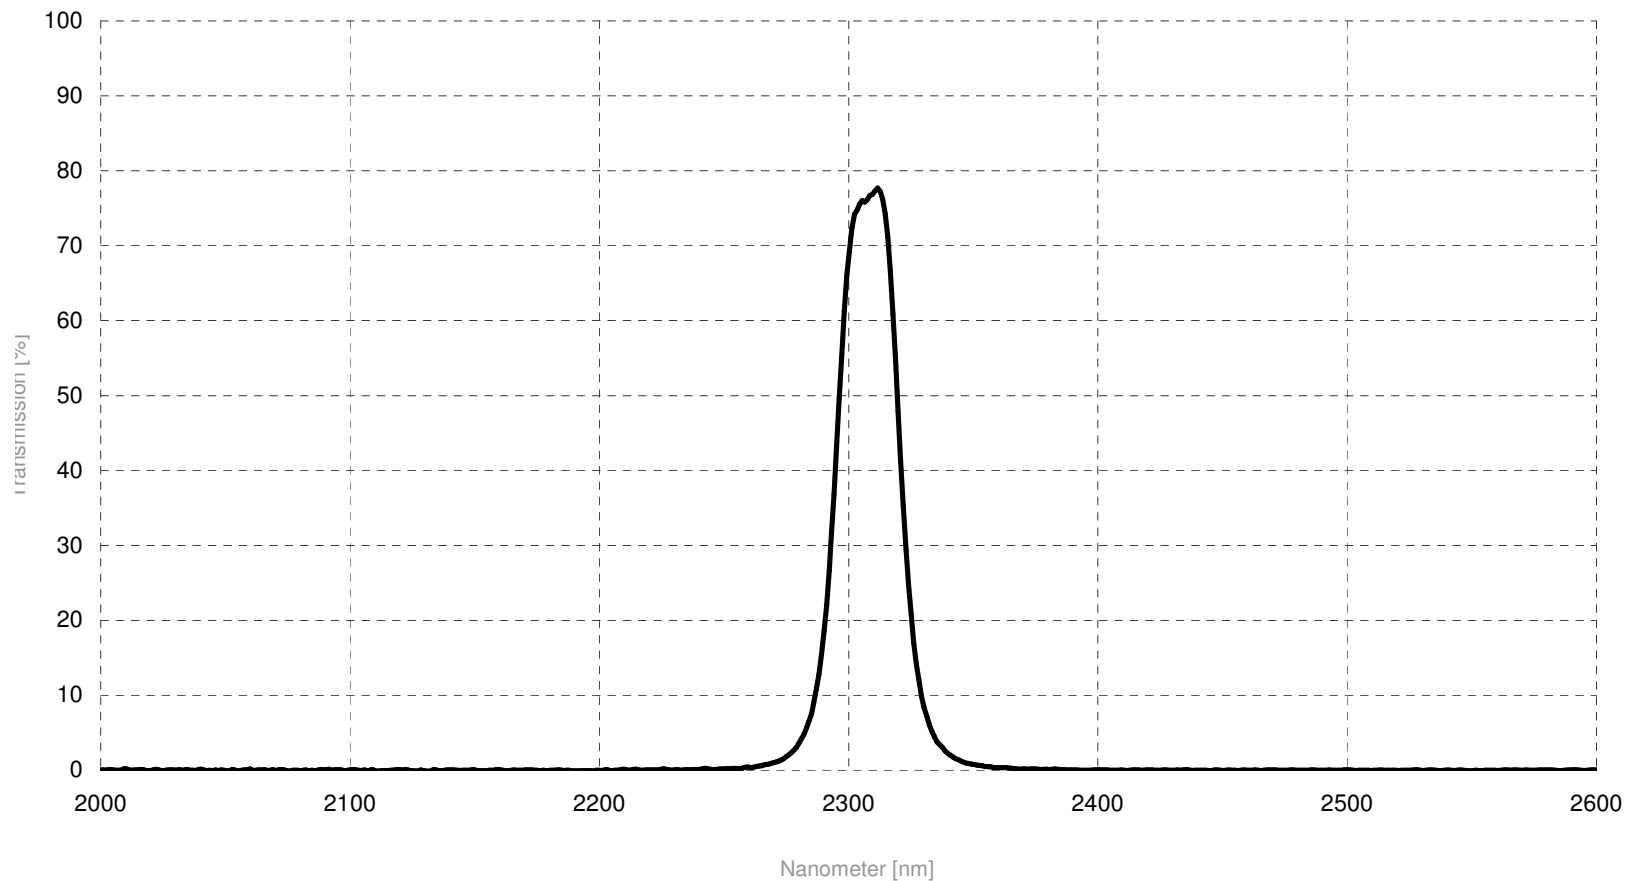

**Actual values:**

CWL = 2307,9 nm

HW = 26,8 nm

Cuton 5% = 2282,4 nm

Cutoff 5% = 2333,7 nm

HP1 = 2294,5 nm

HP2 = 2321,3 nm

Tpeak = 77,7 %

Slope 1 = 0,7 %

Slope 2 = 0,7 %

Data collection range: 1282 - 27005 nm

Diagram range: 2000 - 2600 nm

# SPECTROGON

Optical filters • Coatings • Gratings

**Article:**

NB-2310-025 nm

**Specifications:**

CWL: +10/-10 nm

HW: +5/-5 nm

Tmin: 70 %

Blocking to: 3500 nm

**Measurement conditions:**

Temperature: 23 °C

AOI: 0 deg

Ref: 4-3813

*Calibration traceable to NIST.*

*Spectrogon products conform in all aspects with the RoHS Directive.*