

SPECTROGON

Optical filters • Coatings • Gratings

Date: 19-09-04

Operator: SP

Article:

Art no: 713M

NB-2320-025 nm Ø8.0x1.0 mm

Specifications:

CWL: 2320 ±10 nm

HW: 25 ±5 nm


Tmin: 70 %

Blocking: 100 - 3500 nm

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

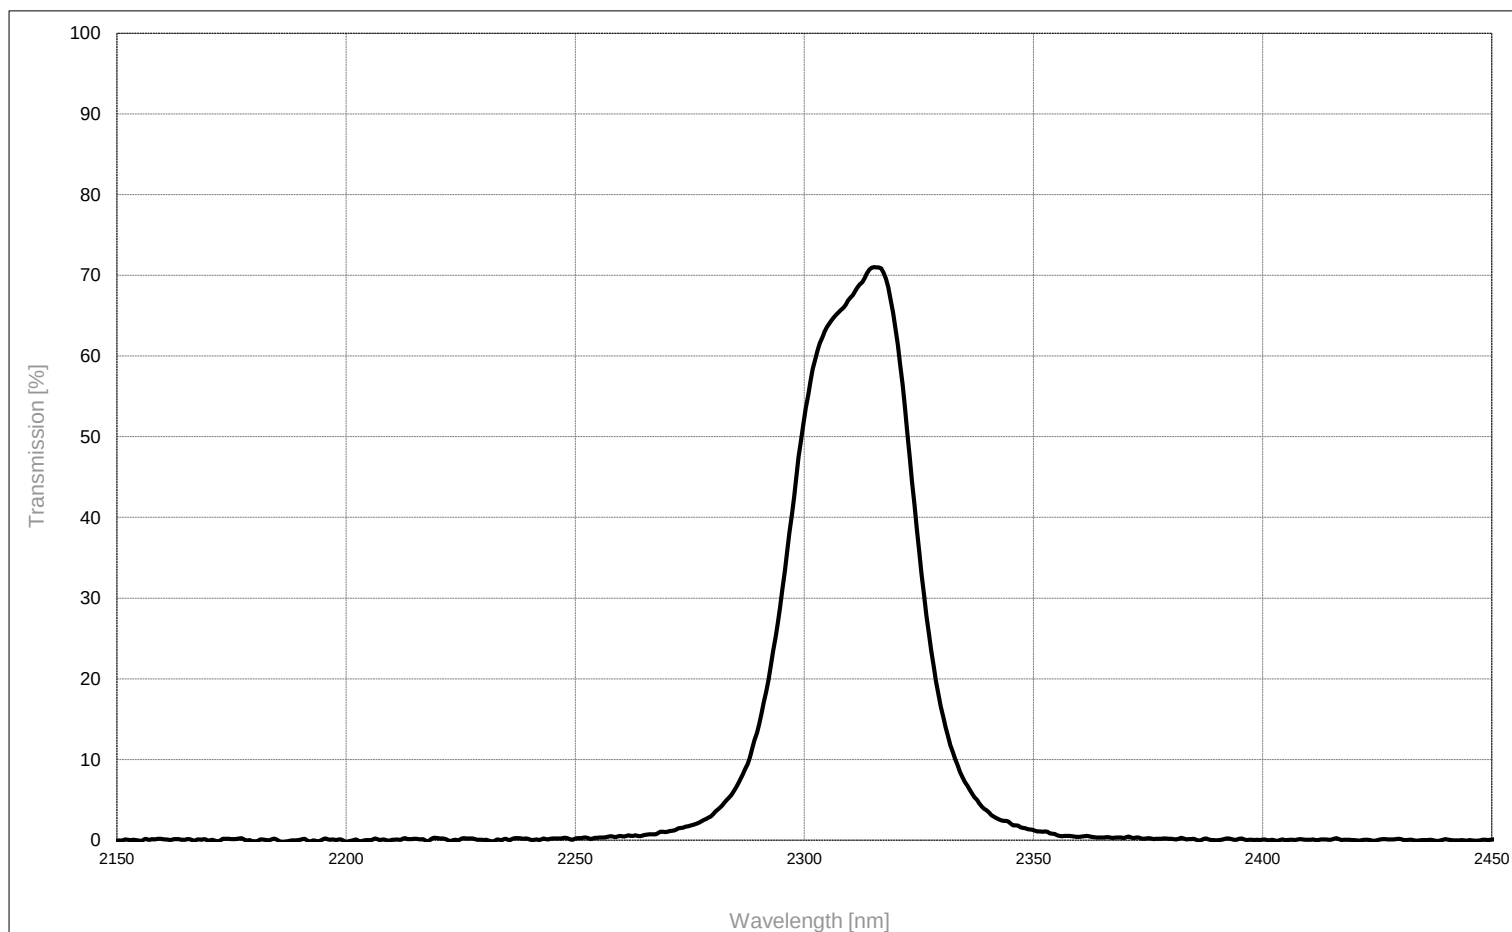

Measured values:

CWL = 2310,65 nm

HW = 28,91 nm

Cuton 5 % = 2283,12 nm

Cutoff 5 % = 2337,64 nm

HP1 = 2296,2 nm

HP2 = 2325,1 nm

Tpeak = 71,02 %...OK

Tavg = 67,19 %

Slope 1 = 0,79 %

Slope 2 = 0,7 %

Spectrogon:

M nr: 50714

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.