


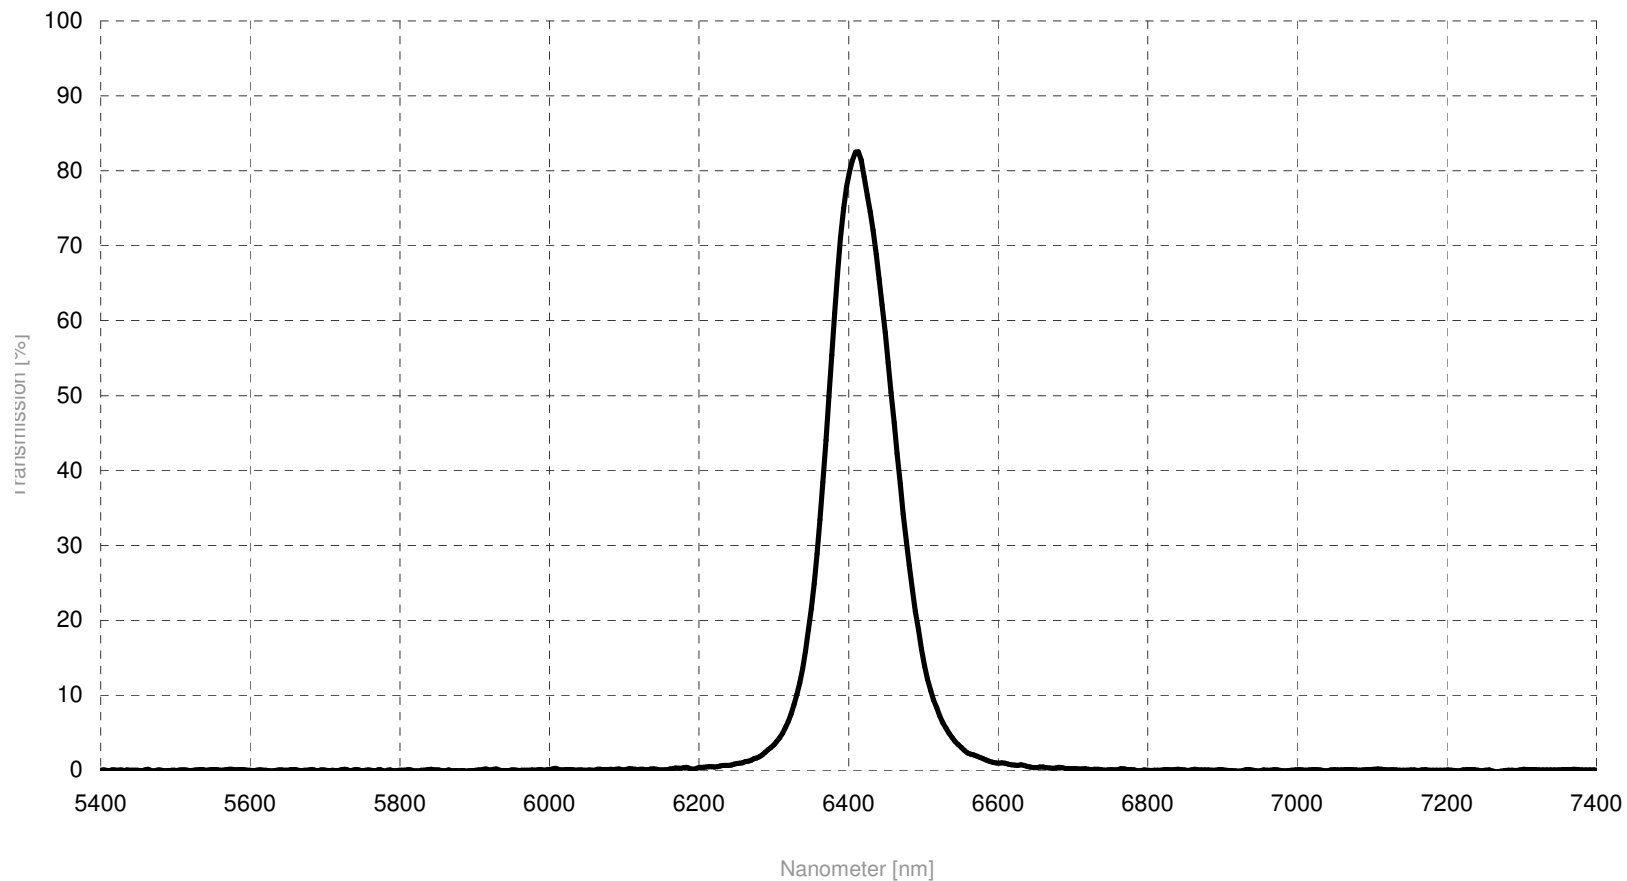

Actual values:

CWL = 6416,9 nm

HW = 98,2 nm

Cuton 5% = 6311,9 nm

Cutoff 5% = 6534 nm

HP1 = 6367,7 nm

HP2 = 6466 nm

Tpeak = 82,5 %

Slope 1 = 1,1 %

Slope 2 = 1,5 %

Data collection range: 1282 - 20019 nm

Diagram range: 5400 - 7400 nm

SPECTROGON

Optical filters • Coatings • Gratings

Article:

NB-6415-110 nm

Specifications:

CWL: +40/-40 nm

HW: +25/-25 nm

Tmin: 70 %

Blocking to: 11000 nm

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

Ref: 10-1522

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.