

SPECTROGON

Optical filters • Coatings • Gratings

Date: 19-11-27

Operator: JLI

Article:

Art no: 713M

NB-9662-240 nm Ø25.4x0.5 mm

Specifications:

CWL: 9662 ±80 nm

HW: 240 ±40 nm


Tmin: 70 %

Blocking: 200 - 15000 nm (OD 3)

Measurement conditions:

Temperature: 23 °C

AOI: 0 deg

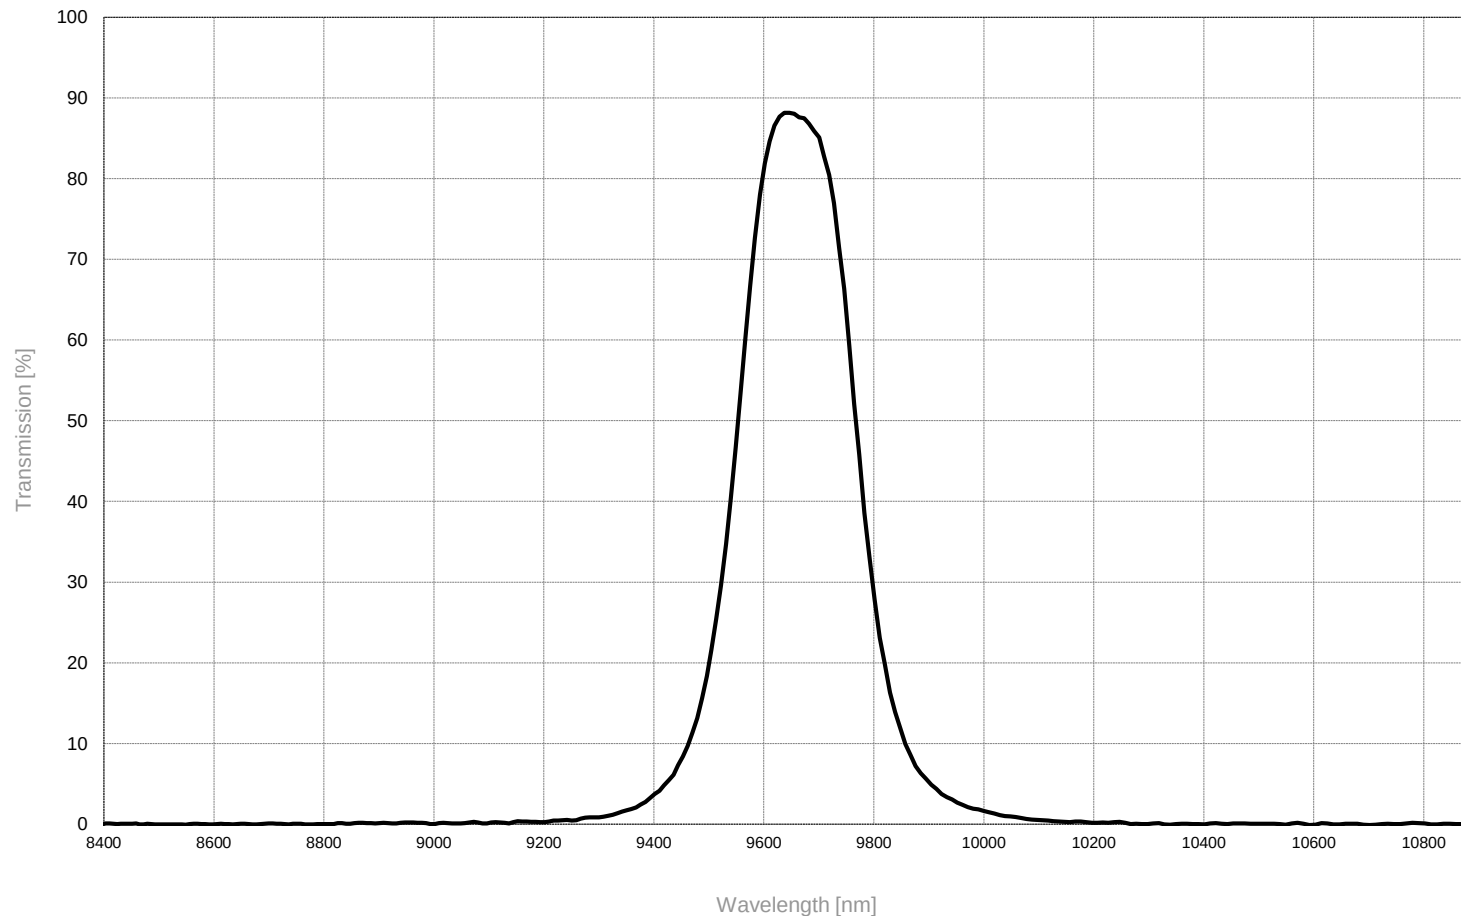

Measured values:

CWL = 9660,4 nm...OK

HW = 230,86 nm...OK

Cuton 5 % = 9421,33 nm

Cutoff 5 % = 9903 nm

HP1 = 9544,97 nm

HP2 = 9775,83 nm

Tpeak = 88,16 %...OK

Tavg = 85,28 %

Slope 1 = 1,66 %

Slope 2 = 1,69 %

Spectrogon:

M nr: 52346

Calibration traceable to NIST.

Spectrogon products conform in all aspects with the RoHS Directive.