


IR filters for thermal imaging


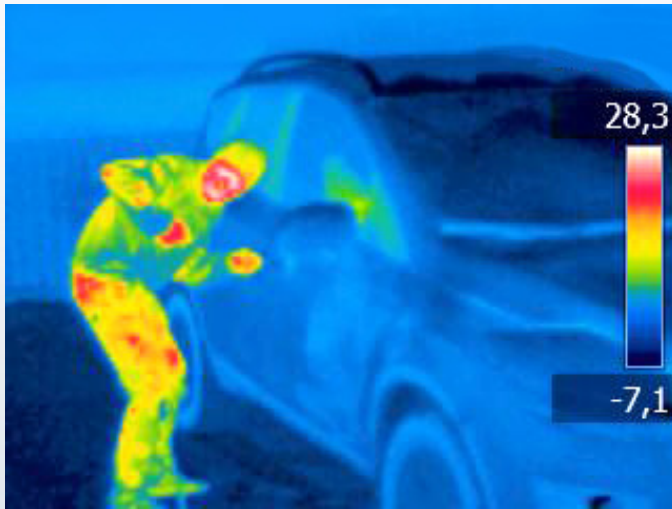


Thermal imaging applications

Spectrogon manufactures infrared filters and windows both for the 3-5 μm and the 8-12 μm atmospheric window. These filters are suitable for infrared imaging applications such as thermography, night vision, surveillance, fire fighting, mine detection, medical imaging, preventive maintenance and industrial process control.

Infrared filter features

The high transmission, high rejection outside the passband, fine surface quality and the coating uniformity gives our filters excellent performance.

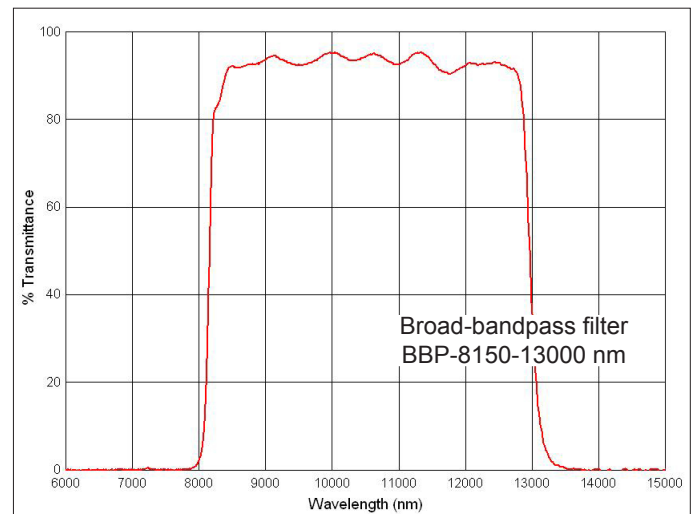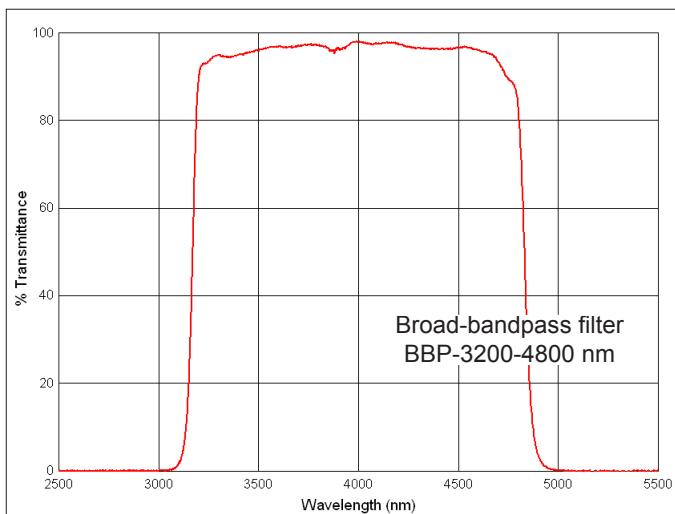

Dimensions


Spectrogon manufactures filters and windows from $\text{Ø}6.0$ to $\text{Ø}200.0$ mm. The wafers can be diced to custom-made sizes, down to as small as 1.0x1.0 mm. Thickness from 0.3 to 3.0 mm.

Substrate materials

Typical substrate materials are: Germanium, Silicon, FZ Silicon, Sapphire, ZnS and ZnSe

Production capabilities

Spectrogon has coating chambers both for small prototype runs and for high volume production.

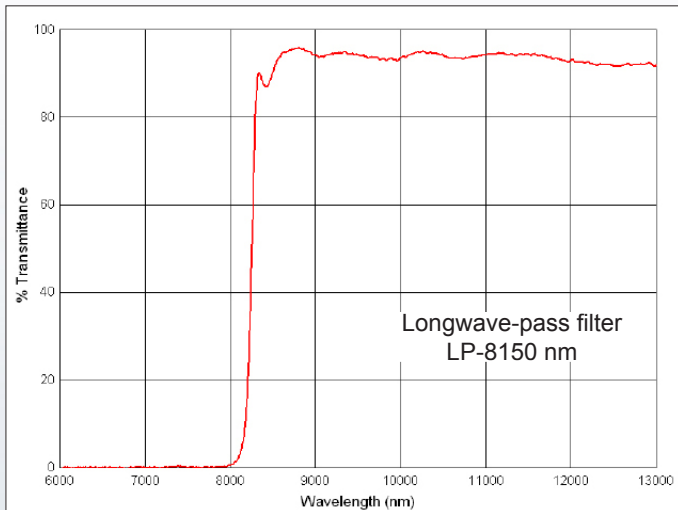

Thin film design



For custom designs we have several thin film designers ready to review your specification. We can help you to determine a specification that is both technically feasible and economical to manufacture.

Off-the-shelf deliveries

For prototype work; check our website for available stock filters, click on the filter description and you will get spectral characteristics for each filter batch. We have approximately 1000 different filter types listed.

Coating process

Spectrogon's infrared filters and windows are manufactured with a hard coating technique which gives films with superior environmental stability.

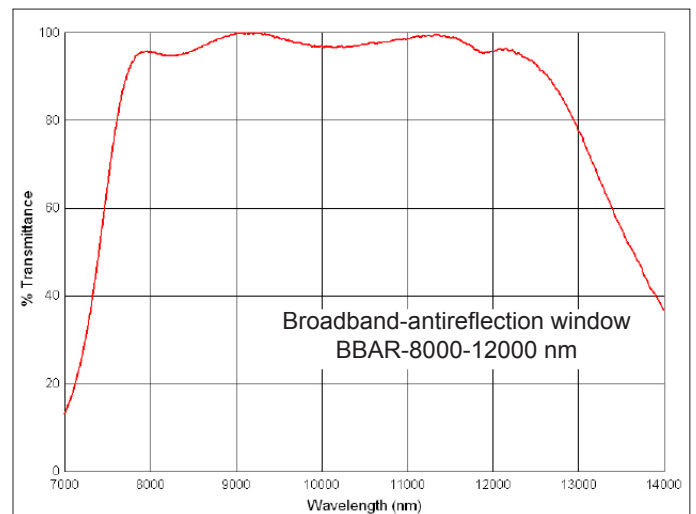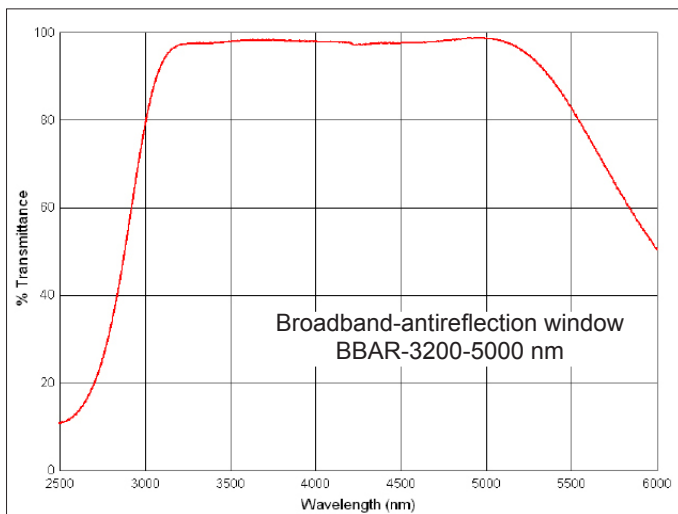

The coatings meet MIL-F-48616: temperature, humidity, mild abrasion and adherence. Manufacturing processes conform to environmental regulations; RoHS (Restriction of Hazardous Substances) EU 2002/95/EC and REACH (Registration, Authorisation and Restriction of Chemicals) EC 1907/2006).

Headquarters, sales office:

Spectrogon AB
Box 7071
SE-187 12 Täby
Sweden
Tel no: +46 8 638 28 00
Fax no: +46 8 638 28 08
Email: sales.se@spectrogon.com

UK sales office:

Spectrogon UK Ltd
Whitworth Rd, Glenrothes
Fife, KY6 2TF
United Kingdom
Tel no: +44 1592 770 000
Fax no: +44 1592 770 040
Email: sales.uk@spectrogon.com

US sales office:

Spectrogon US Inc
115 Route 46 West, Suite A2
Mountain Lakes, NJ 07046
USA
Tel no: +1 973 331 1191
Fax no: +1 973 331 1373
Email: sales.us@spectrogon.com